





WO15EMZ5-1

**Z-Wave Radio Frequency (RF) Controlled, 120 VAC
 15 Amp, Duplex Receptacle, Series 500**

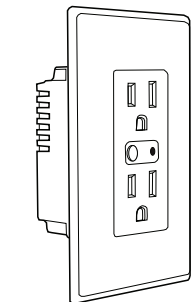

Shown with supplied decorative trim plate

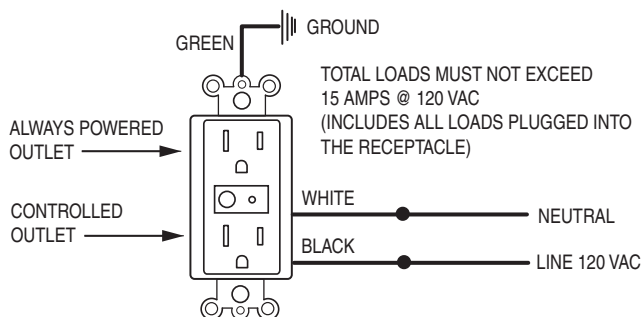

NOTE: This unit must be added to the Network **only where it will be permanently installed**. The proper operation of this node in the mesh network is dependent on it knowing its location with respect to other nodes. You cannot "test bench" configure this unit, then install.

WO15EMZ5-1 WALL MOUNTED SWITCH

The GoControl™ family of Z-Wave® certified wireless lighting products (smart LED fixtures, bulbs, switches, dimmers, outlets, plug-in modules, and thermostats) and security devices (alert sounder, motion sensor, and door/window sensor) bring a new level of intelligent wireless capability to commercial and residential environments.

The Z-Wave wireless protocol is an international wireless standard for remote home automation, security and other applications. This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

GoControl Z-Wave products are easy to install, are Z-Wave Plus certified, and allow dealers to create an integrated wireless network with nearly limitless expansion and interoperability with security, energy management, home entertainment, appliances, and more.

DANGER! SHOCK HAZARD. Read and understand these instructions before installing. This device is intended for installation in accordance with the National Electric code and local regulations in the United States, or the Canadian Electrical Code and local regulations in Canada. It is recommended that a qualified electrician perform this installation. Make sure the load controlled by the switch does not exceed 1800 watts. For indoor use only. Retain instructions for future use.

Z-WAVE PLUS FEATURES

The WO15EMZ5-1 contains a Z-Wave 500 Series Module that supports Z-Wave Plus® features. A Z-Wave certified portable or stationary Controller can communicate with the Z-Wave 500 Series Module.

Depending on the capability of the Controller or gateway software, the following operations can be performed with the WO15EMZ5-1. Refer to the Controller or gateway manual for details.

- Turn the load ON and OFF.
- Add or Remove the WO15EMZ5-1.
- Assign the WO15EMZ5-1 to a specific Group/Scene and/or to include the load as part of ALL ON or ALL OFF system commands.
- Over-the-air firmware update by the gateway or static Controller.
- Lifeline function which automatically notifies the associated modules and the network that a manually reset device is no longer in the network, thus, the corresponding association becomes invalid.
- Monitors the amount of energy being used and reports the current usage to the Z-Wave controller

INSTALLATION

Wire this receptacle in place of a current receptacle according to the diagram above. Use copper wire only, or equivalent.

Adding to a network:

Refer to your Controller operating instructions to add this switch under the command of the Wireless Controller.

1. With your Controller in Discovery or Add Mode, tap the button on the face of the outlet. The LED will blink slowly when in ADD Mode.
2. You should see an indication on your Controller that the "device was added" to the network and the LED will stop blinking.

3. The device will appear in the list of Switches. It should display as a switch. If the Controller/Gateway shows the addition failed, repeat Steps 1-3.

✓ **NOTE:** If you have trouble adding the WO15EMZ5-1 to a group it may be that the Home ID and Node ID were not cleared from it after testing. You must first "RESET UNIT" to remove it from the network. Although adding it to a group includes it in the network, removing it from a group does not remove it from the network. If removed from a group, it functions as a repeater (only). "RESET UNIT" removes it completely from the network.

To Reset Unit (If Required):

In the event that your primary Controller is lost or otherwise inoperable, to reset the WO15EMZ5-1 and clear all network information, follow these steps:

1. Tap the button on the face of the outlet five (5) times.
2. Press and hold the button for 15 seconds. The LED will increasingly blink faster to indicate that a Reset is taking place.
3. LED will turn off when reset is complete.

Removing from a network:

The WO15EMZ5-1 can be removed from the network by the Controller/Gateway. Refer to the Controller operating instructions for details.

1. Set the Controller into Removal Mode and follow its instruction to delete the WO15EMZ5-1 from the Controller.
2. Remove the switch by tapping the button on the face of the outlet 2 times. The LED will begin blinking slowly for 10 seconds indicating that it has been removed.
3. You should see an indication on your Controller that the "device was removed" from the network.

BASIC OPERATION

(Local Control)

The button on the WO15EMZ5-1 allows the user to:

- Turn the attached load on or off.
- Tapping the button on the face of the outlet turns the load attached ON to OFF.

LED Indication

To act as a night light, the LED on the WO15EMZ5-1 will turn ON when the load attached is ON. However, the LED can be user configured to turn ON, when the load attached is OFF, if so desired. See "CONFIGURATION" section.

Remote Control

The WO15EMZ5-1 will respond to BASIC and BINARY commands that are part of the Z-Wave system. Refer to your Controller's instructions as to whether your Controller can transmit those commands.

Associations

The WO15EMZ5-1 supports one Group with five Nodes for lifeline communication. Group 1 must be assigned the Node ID of the Controller to which unsolicited notifications from the WO15EMZ5-1 will be sent. The Z-Wave Controller should set this Association automatically after inclusion. You can associate up to five Z-Wave devices to Group 1.

For instructions on how to "set Lifeline Association" please refer to your wireless Controller instructions.

Removing Associations

To remove the Associations, if the Hub has recognized the Associations, refer to the Z-Wave Hub's instructions on how to remove Associations. If the Hub has not recognized the Associations, removing the W015EMZ5-1 from the Z-Wave network will eliminate the Associations.

ADVANCED OPERATION

All On/All Off

The W015EMZ5-1 supports the ALL ON / ALL OFF commands. The W015EMZ5-1 can be set to respond to ALL ON and ALL OFF commands four different ways.

Refer to your Controller for information on how to set the W015EMZ5-1 to operate in the manner you desire. Some Controllers may be only able to set certain settings of ALL ON/ALL OFF response.

The four different ways the W015EMZ5-1 can be setup to respond to ALL ON and ALL OFF commands are:

1. Responds to ALL ON or the ALL OFF command.
2. Responds to ALL OFF command but will not respond to ALL ON command.
3. Responds to ALL ON command but will not respond to ALL OFF command.
4. Responds to ALL ON and the ALL OFF command.

CONFIGURATION

The W015EMZ5-1 supports the Configuration command. Each unit can be configured to operate slightly differently than how it works when you first install it.

Using the Configuration command you can configure the following:

Night Light

By default, the LED on the W015EMZ5-1 will turn OFF when the load attached is turned ON. To make the LED turn ON when the load attached is turned ON, set Parameter 3 to a value of 1.

Parameter	Length	Valid Values	Configuration Option
3	1 Byte	0	LED OFF when the load is on, and ON when the load is off (default mode)
		1	LED ON when the load is on, and OFF when the load is off (default mode)
		2	LED is always on
		3	LED is always off
		4	LED blinks during RF transmissions from or to the device

Energy Monitoring

W015EMZ5-1 reports the total accumulated Kilowatt Hours (kWh) and the instantaneous Watts being consumed by the load.

Parameter	Length	Valid Values	Configuration Option
13	1 Byte	0	Automatic reporting OFF
		1-255	Number of minutes between automatic reporting (Default = 6)

Configuration Parameter 13 configures the rate at which the energy readings are reported. If the maximum kWh value that can be reported is reached (21,474 kWh), then it will remain at the maximum level until reset to 0.

The Watts reading provides the immediate reading of the power being consumed by the load. The Watts reading takes several seconds to settle so wait a few seconds before reading the energy value when the state of the switch (on / off) has changed.

To reset, the total accumulated kWh used by the W015EMZ5-1 the Z-Wave controller needs to send a reset command at the request of the user. It will also be reset if the W015EMZ5-1 is excluded from the Z-Wave network.

Over-The-Air (OTA) Update

A Quadruple tap of the switch enables the firmware update mode. Firmware update mode must be entered before the system Controller sends the firmware update command to begin downloading new firmware. Firmware update mode is enabled for 60 seconds after the quadruple tap. If the Firmware update does not begin before the end of the 60 seconds then firmware update mode is exited returns to normal operation. The LED "winks" twice per second indicating it is in firmware update mode.

Resetting to Defaults

Each configuration Parameter can be set back to its default setting by setting the default bit in the Configuration Set command. See your Controller's instructions on how to do this (and if it supports it). All configuration commands will be reset to their default state when the W015EMZ5-1 is excluded from the Z-Wave network by using the Controller to reset the node.

SPECIFICATIONS

Power: 120 VAC, 60 Hz
Signal (Frequency): 908.42 MHz / 916 MHz
Maximum Load: Resistive: 15 amps (1800 watts) maximum, 120 VAC
 Range: Up to 130 feet line of sight

Z-Wave® and Z-Wave Plus® are registered trademarks of Sigma Designs and its subsidiaries in the United States and other countries.

REGULATORY INFORMATION

The W015EMZ5-1 is certified to comply with applicable FCC and IC rules and regulations governing RF and EMI emissions.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician to help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

IC Notice

This Class B digital apparatus complies with Canadian ICES-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with the Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

WARRANTY

What is Covered?

Nortek Security & Control ("NS&C") warrants to consumers who purchase this product for personal, family or household purposes new from NS&C directly or from an authorized NS&C dealer, that the product will be free from defects in materials and workmanship for a period of (1) year from the date of purchase. This warranty only applies if the product is installed at a residence in the 50 United States or District of Columbia, and only at the site of the original installation. It is not transferable. This warranty is not extended to resellers.

If a defect exists, NS&C will have you ship the defective part or product to us and we will, at our option, either repair or replace it. This warranty does **not** cover the cost of labor to remove a defective part or product or to reinstall any repaired or replacement part or product

This warranty does **not** cover defects or damages caused by improper handling, maintenance, storage, installation, removal or re-installation, misuse, non-factory authorized modification or alteration, use of incompatible accessories, electrical power problems or surges, impact by foreign objects, accident, fire, acts of God, normal wear and tear or shipping damage other than a shipment from NS&C. Note that all NS&C products are designed to be installed, removed and serviced by trained individuals or professionals.

Keep your original sales receipt as it will be required to obtain warranty service.

This warranty shall not be extended or restarted upon receipt of any repaired or replacement part or product under this warranty. No person is authorized to extend or otherwise modify this warranty.

How do I Obtain Warranty Service?

To obtain warranty service, email our Returns Department at returns@nortek.com. Include your name, address, telephone number, the model number of your product, a copy of your original sales receipt, and a description of the problem. Unless we need to discuss the situation further with you, you will be emailed a Return Authorization Number and shipping instructions. If we need to discuss the situation further with you, we will call or email you. NS&C may require troubleshooting on installed product before a Return Authorization Number is issued. Anything shipped to us without a Return Authorization Number will be automatically returned unopened. You are responsible for the charges for shipment to us, unless you are a California resident.

Limitations

THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL NOT EXCEED THE WARRANTY PERIOD PROVIDED HEREIN.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

NS&C SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE BREACH OF ANY WRITTEN OR IMPLIED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other legal rights which vary from State to State.